


The American Chocolate Fountain Control Panel

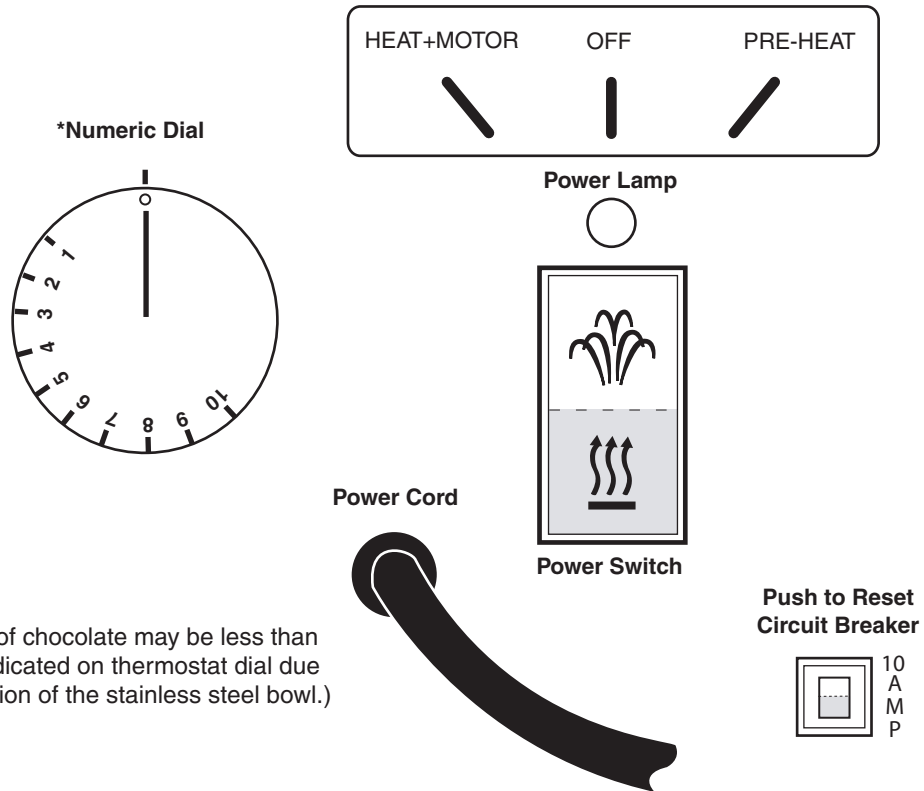

Large / Med Chocolate Fountain Maintenance Instructions

The drive belt may loosen and slip during shipping & handling.

To adjust motor bracket, turn fountain base upside down and remove 3 leveling feet. Remove bottom cover.

Adjust the drive belt by loosening the 4 mounting bolts on motor bracket and slide motor to tighten belt tension.

Tighten mounting bolts, replace bottom cover and replace leveling feet. Level base.

Performing this adjustment does not void warranty.

List of tools needed for maintenance on MFCF30/35 & MFCF40 Chocolate Fountains.

- 1/2" Open End Wrench
- 1/4" Nut Driver
- Phillips Head Screwdriver
- Keep Extra Belts on hand

